 
 


CANOPRO COMPACT
3M X 3M
INSTRUCTION
MANUAL

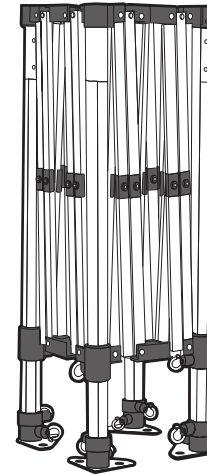

 
Scan Here
instructional
video



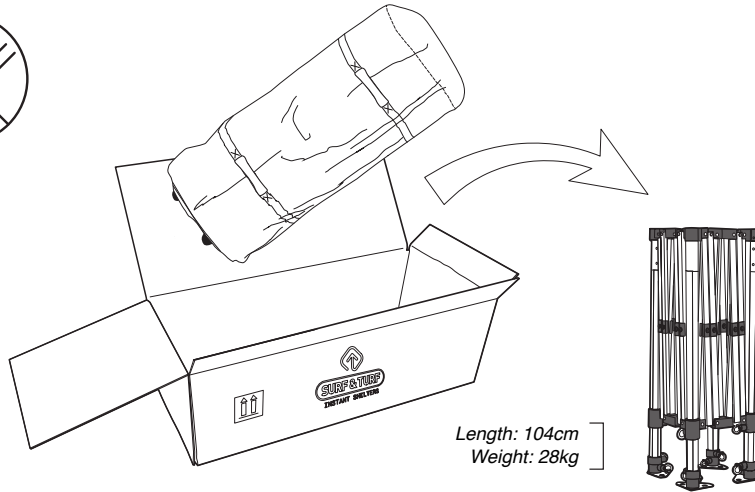

Length: 104cm
Weight: 28kg

Remove the shelter frame from the box and stand vertically on a flat surface. Then remove the frame out of its black wheeled bag.

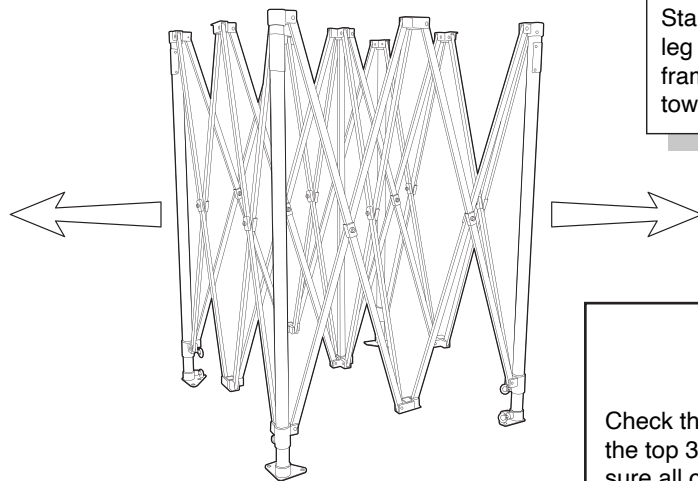


Stand at a corner leg and extend the frame outward towards you.




Check the legs are not caught in the top 3-Way joints, and make sure all cross bars are straight. This is always important to check after the frame has been transported.

1

 
ACCESSORIES

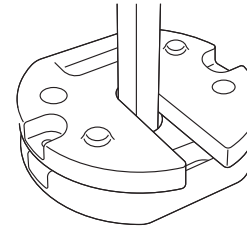

 We highly recommend that you use steel weights to secure the framework when setting up your gazebo on a hard surface.

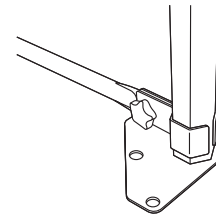


 Ground bar kits are also available and worth considering for extra frame and sidewall stability.

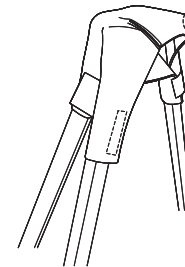

Unique to Surf & Turf Instant Shelters, our neoprene covers are specially designed protectors for every joint that would be in contact with the canopy and protect it from damage against the metal framework.

 
*Included with all Canopro Elite shelters

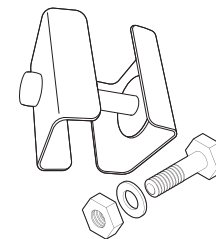

Should your gazebo frame become damaged or aspects lost, we hold full stock of any replacement parts that you may need.

14

 SHELTER CARE

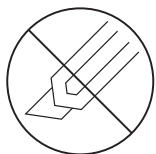


Please take care when opening the boxes containing the items. The canopy and sidewalls are packed well within the cardboard boxes but the canvas material could be sliced if the boxes are opened with a sharp tool.



Please ensure water is not allowed to collect on the canopy during sustained rainfall or snow, as this extra heavy load could cause damage to both the structure of the frame and canopy material.



 Your frame and walls come in their own cover bags. Please use these to pack your items away after use to help protect your gazebo when in storage.

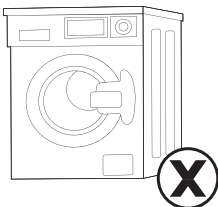

Do not wash your canopy and walls in a machine or use chemical detergents. These can deteriorate the performance of the PVC coating.

 
 
 


 
 
 
To clean the canopy and walls, we recommend warm soapy water and a good hand scrub regularly to remove excess dirt and grime.

NEOPRENE PROTECTORS

*when purchased as an optional accessory


Fasten the neoprene joint protectors to the shelter frame corners and connecting joints using the Velcro straps.

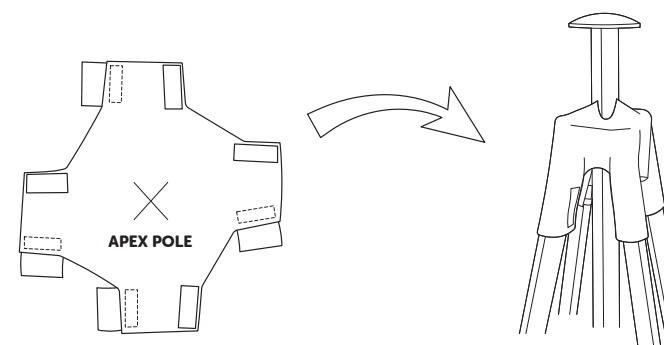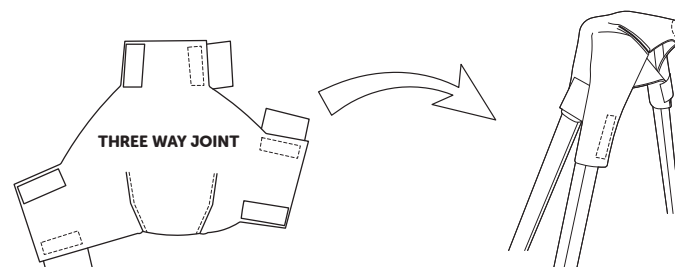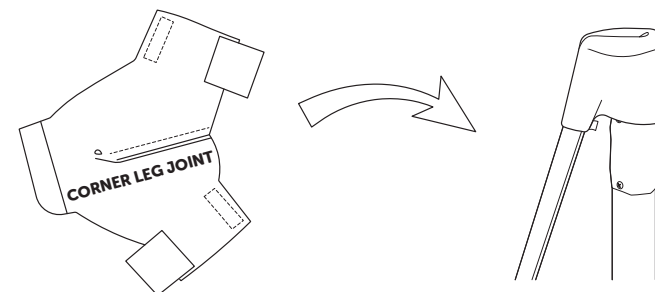

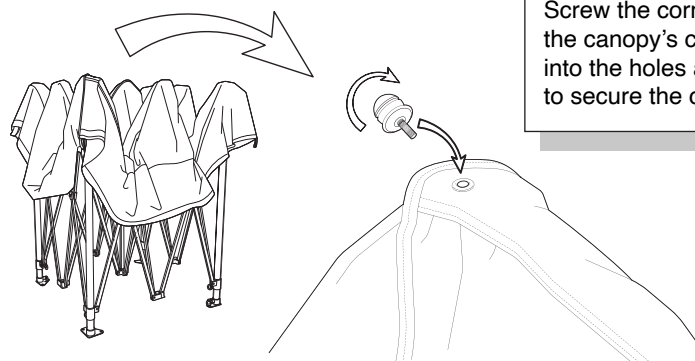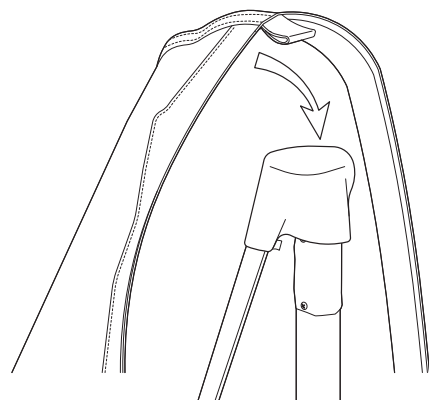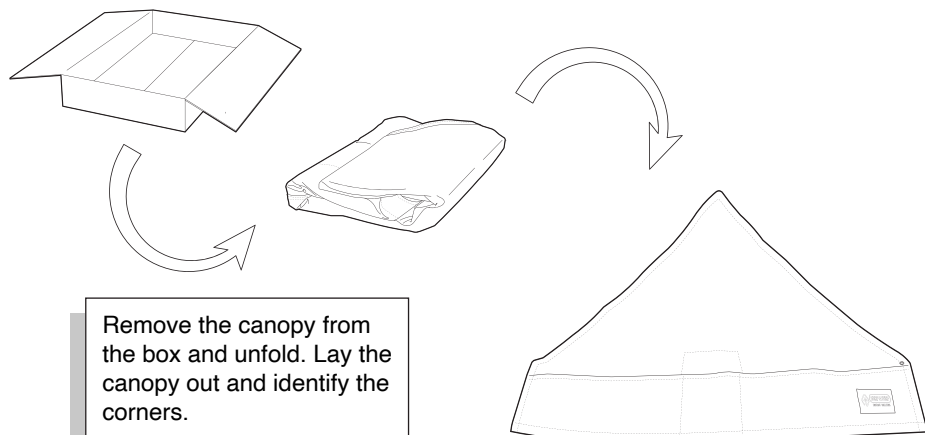


3

 PACKING AWAY

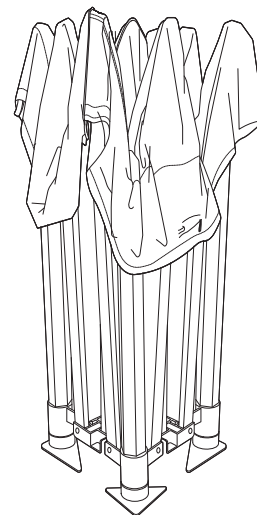


 Care should be taken to ensure the fabric canopy does not get caught in the metal cross bar framework as this can cause the fabric to tear.

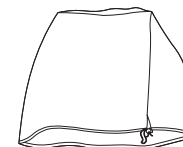

All our instant shelters come with a canopy protector cover. This drawstring bag fits over the canopy when the frame is collapsed, providing protection from marks during storage. This bag can also be used to store the canopy separately.

The following diagram illustrates the most effective way to fold your canopy for packing. Following these steps will ensure that it fits neatly and securely for storage.

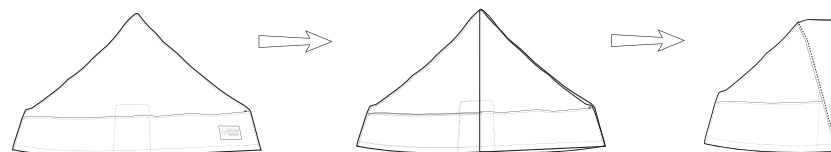 

Fold over one corner to the opposite corner

Fold down the peak

Fold lengthways into thirds



Fold widthways in half

 


12

AWNING EXTENSION


Bespoke Optional Extra

Erect the gazebo as per the instructions. You will notice on the front valance of the canopy that there is a velcro flap.

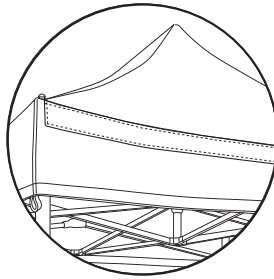


Before raising the full height of the shelter, remove the awning material from its packaging and attach to the front valance part of the canopy by use of the velcro strips.

 
Connect the support bars together and slide this through the pocket at the bottom edge of the awning material.

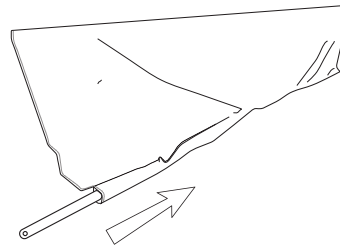

 Attach the clamps to the adjustable end struts. Fix the clamps to the gazebo frame legs and tighten. Ensure each bar is pointing directly out and away from the shelter. If the bar appears to be at an angle, swap the end leg clamps over.


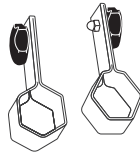


 Remove the black cap from the end strut and place through the hole of the main support bar. Loosen the grey plastic clamp by pulling the lever downwards, then pull the extender bar outwards until the material is right. Close the grey clamp back up to tighten and repeat on opposite end.

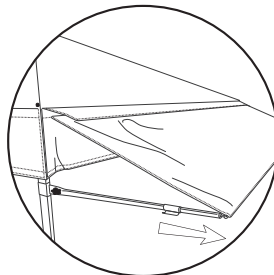



11

  Stand on opposite corners of the frame. Holding the central cross bars, walk the frame outwards as far as it will go.

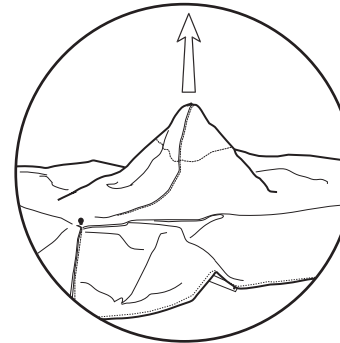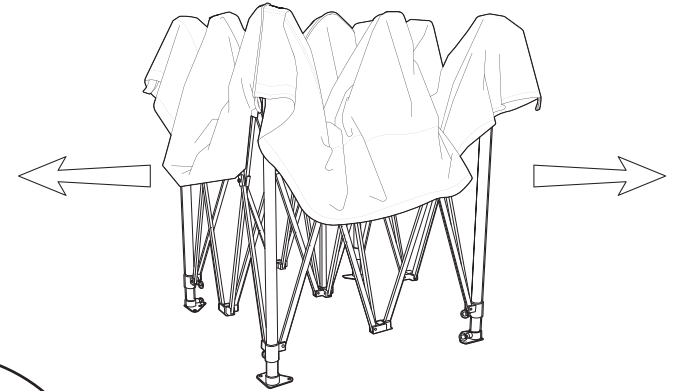


Hold the top of the centre post and pull upwards until the pin clicks into place.

  Push up on the bottom centre post joint to ensure this is secured.

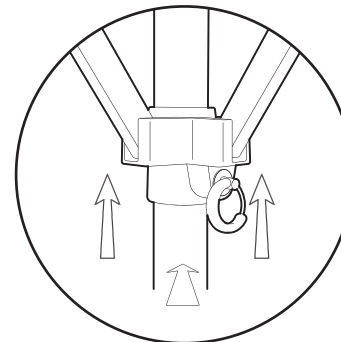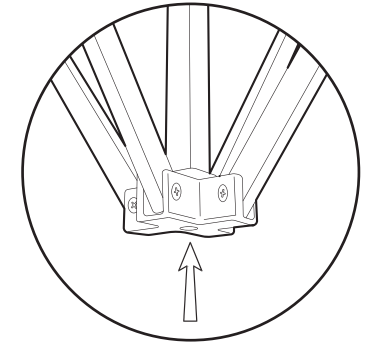


On the first corner leg, push the sliding joint upward until it clicks into position. This will extend the framework further and allow the pin to fit into the hole at the top of the leg. After it clicks into place, repeat this process for the remaining three legs, ensuring the sliding joints are secured.

 4

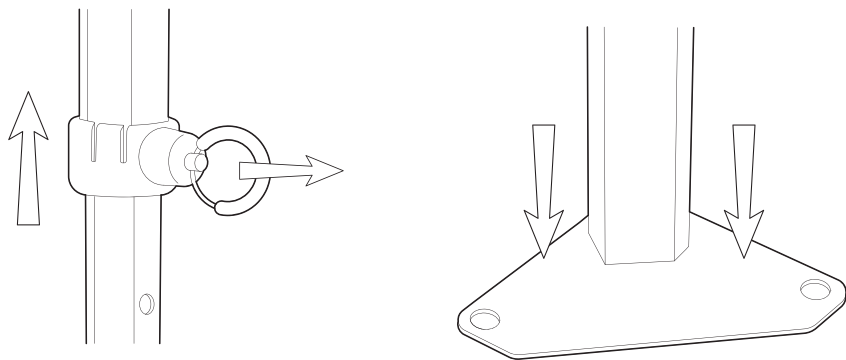

When lifting the middle leg, release the pull pin and guide the inner leg with foot plate down to the floor until the pin locks into the top hole.

 
Once you have successfully extended one side of the legs, move on to the next side.

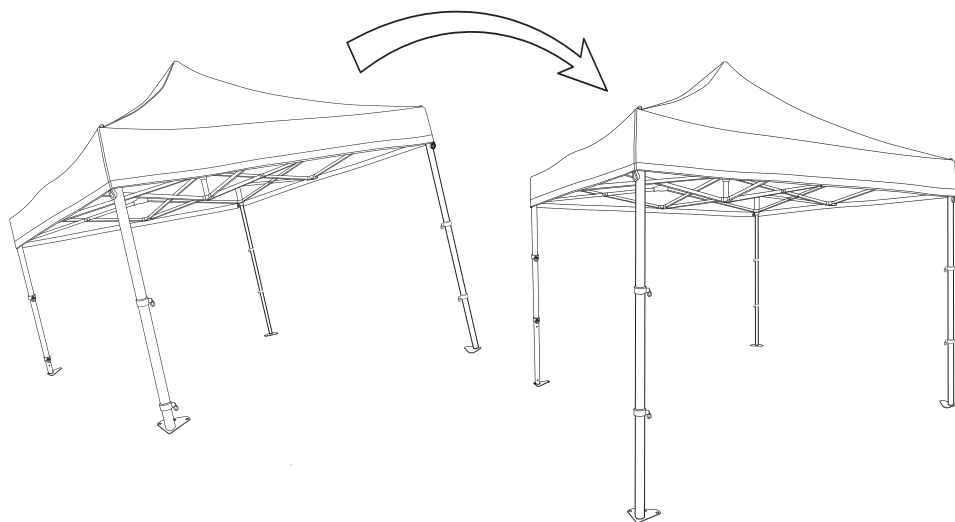


5

To open the door and window curtain, fold it in half three times, then scrunch and roll it up to the top. Fasten the buckle and tighten the strap to secure it in place.

DOOR

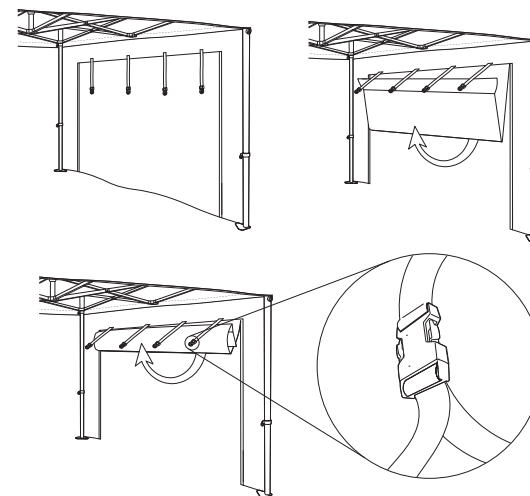


WINDOW

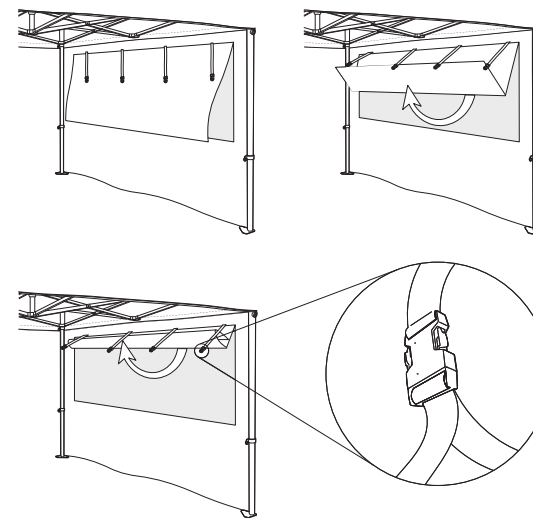


10

 ANCHOR KIT

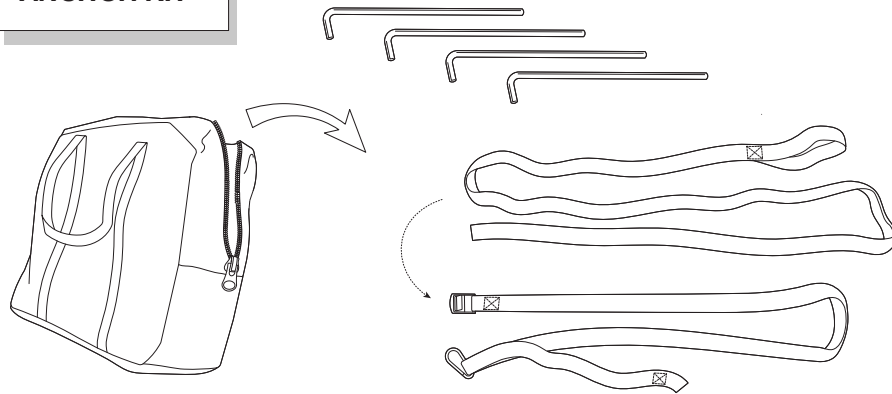


Inside the bag, you'll find 360mm steel stakes and webbing anchor straps, designed to securely fasten around the frame.

 Secure the strap around the top of the sliding joint as illustrated below and clip it into place at the top corner. Guide the loose strap down the inside of the leg and thread the metal stake through the loop. Drive the metal stake firmly into the ground and tighten the strap using the ratchet mechanism.

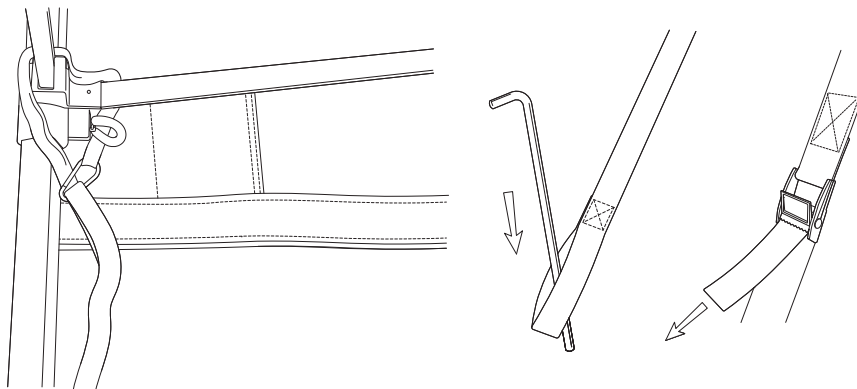


9

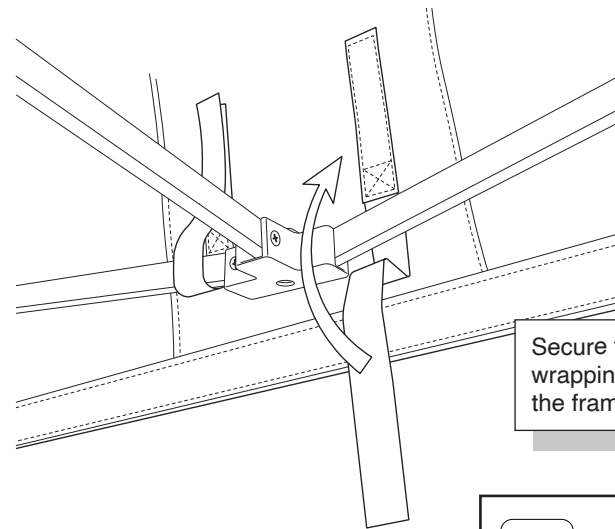 

Secure the valance to the frame by wrapping the Velcro straps around the frame on all sides.




 
Insure these straps are removed before packing the frame away.

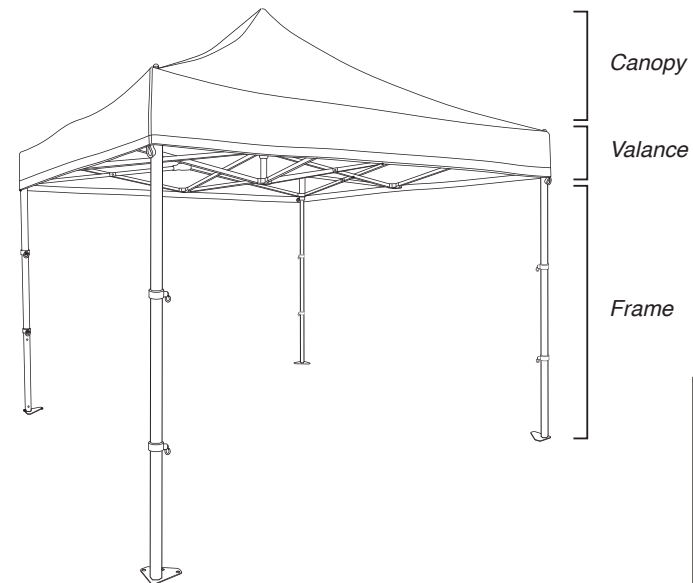

The frame and canopy are now fully set up! Continue with the next steps to attach walls and accessories.


6

Remove the shelter walls from the box and separate them out.

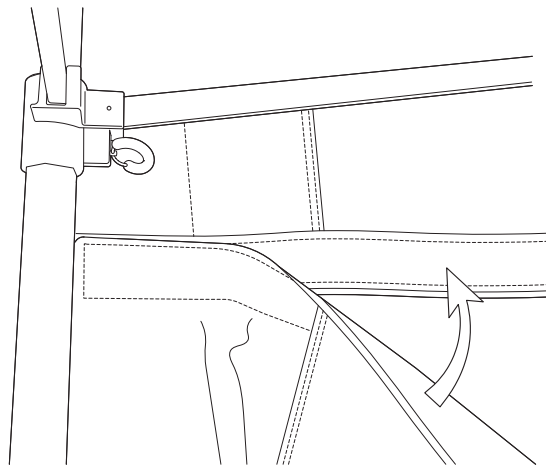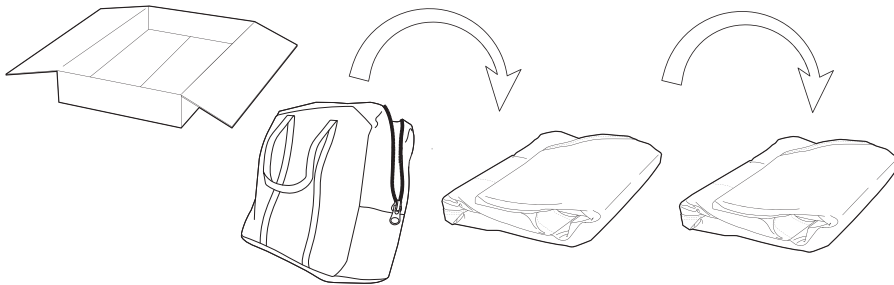


Locate the top edge of the wall with the long Velcro strip and align it with the matching Velcro along the inside bottom edge of the canopy's valance.


Secure the walls to the frame by wrapping the Velcro straps around the legs on all sides.

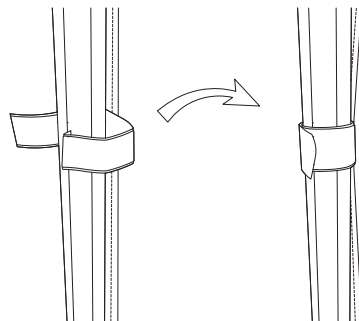

7

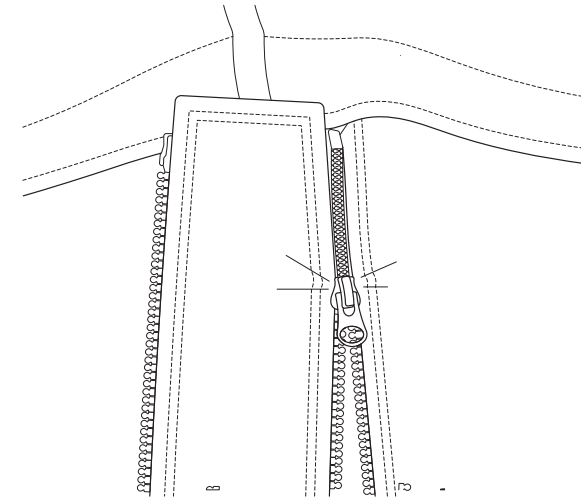

 The sidewalls are designed for a close fit to ensure a neat and professional appearance. If you have difficulty connecting the last two walls, use the additional joining strip included with a full set of walls.

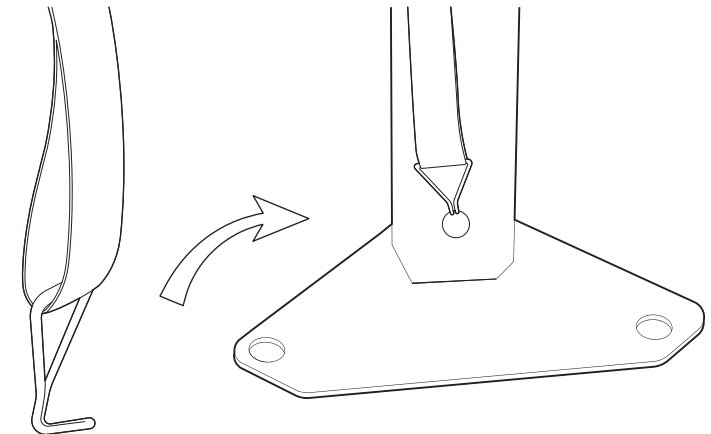

To securely fasten the wall to the frame, insert the small metal hook attached at the bottom of the wall into the designated hole at the foot of the frame. Gently pull it tight to ensure a firm and secure hold.

8