 


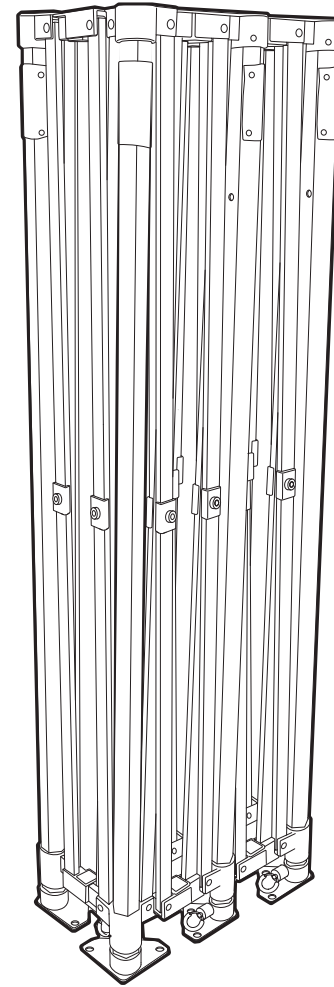

CANOPRO ELITE

6M X 3M

INSTRUCTION

MANUAL



Scan Here
*instructional
video*



 
SURF & TURF

INSTANT SHELTERS




SURF & TURF


INSTANT SHELTERS

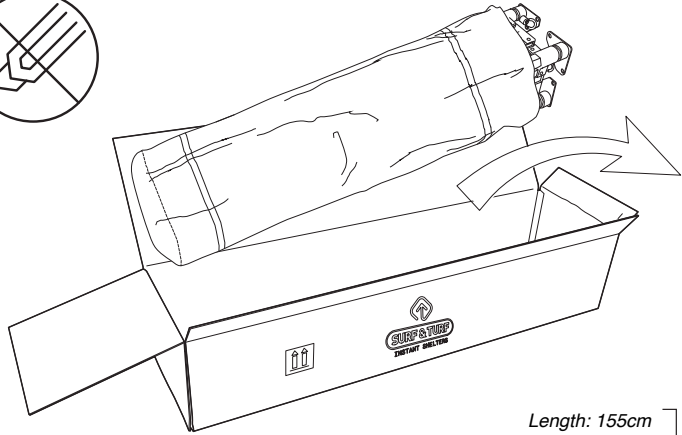

Length: 155cm
Weight: 69kg

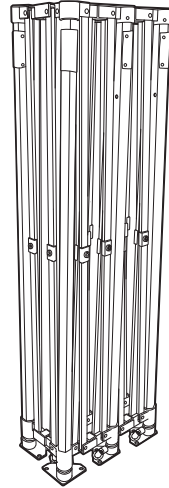 

 Remove the shelter frame from the box and stand vertically on a flat surface. Pull the black cover bag off over the top of the frame.

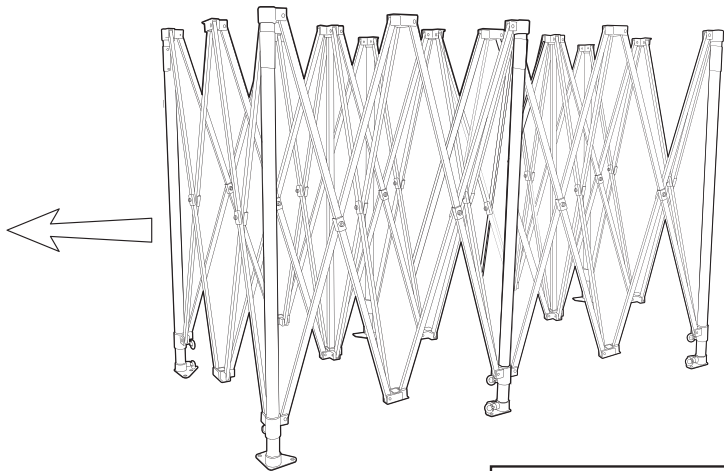


Stand at either end and extend the frame outward towards you.




Check the legs are not caught in the top 3-Way joints, and make sure all cross bars are straight. This is always important to check after the frame has been transported.

1

 
ACCESSORIES

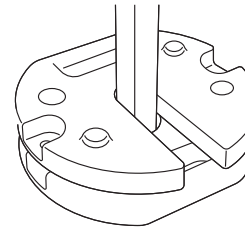

 We highly recommend that you use steel weights to secure the framework when setting up your gazebo on a hard surface.

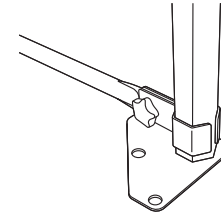


 Ground bar kits are also available and worth considering for extra frame and sidewall stability.

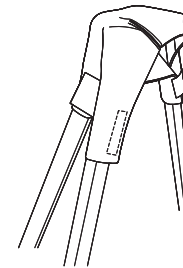

Unique to Surf & Turf Instant Shelters, our neoprene covers are specially designed protectors for every joint that would be in contact with the canopy and protect it from damage against the metal framework.

 
*Included with all Canopro Elite shelters

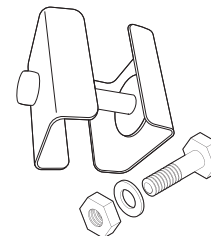


Should your gazebo frame become damaged or aspects lost, we hold full stock of any replacement parts that you may need.

14

 SHELTER CARE

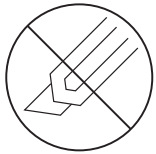

 
Please take care when opening the boxes containing the items. The canopy and sidewalls are packed well within the cardboard boxes but the canvas material could be sliced if the boxes are opened with a sharp tool.

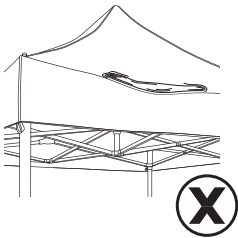

Please ensure water is not allowed to collect on the canopy during sustained rainfall or snow, as this extra heavy load could cause damage to both the structure of the frame and canopy material.



 Your frame and walls come in their own cover bags. Please use these to pack your items away after use to help protect your gazebo when in storage.

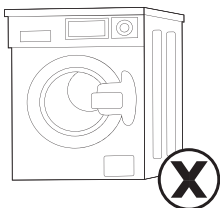





Do not wash your canopy and walls in a machine or use chemical detergents. These can deteriorate the performance of the PVC coating.





To clean the canopy and walls, we recommend warm soapy water and a good hand scrub regularly to remove excess dirt and grime.

NEOPRENE PROTECTORS

    
Fasten the neoprene joint protectors to the shelter frame corners and connecting joints using the Velcro straps.

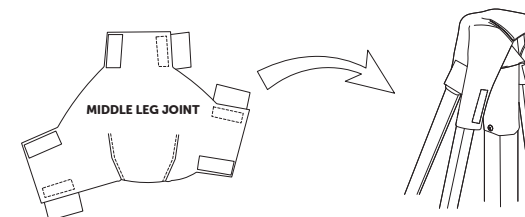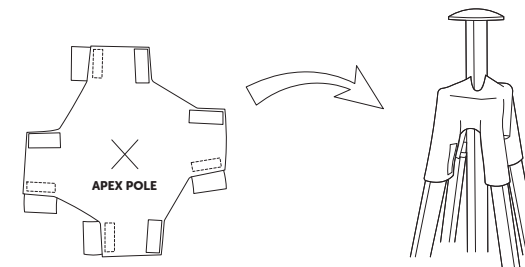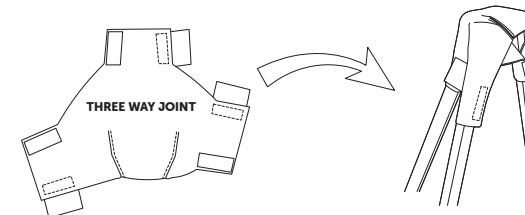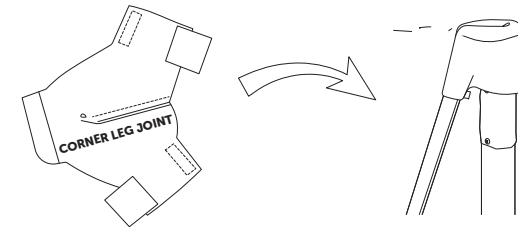

  Remove the canopy from the box and unfold. Lay the canopy out and identify the corners.

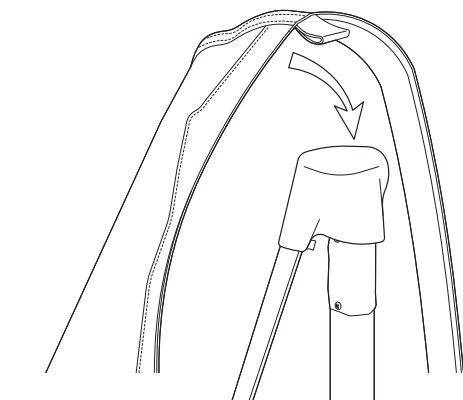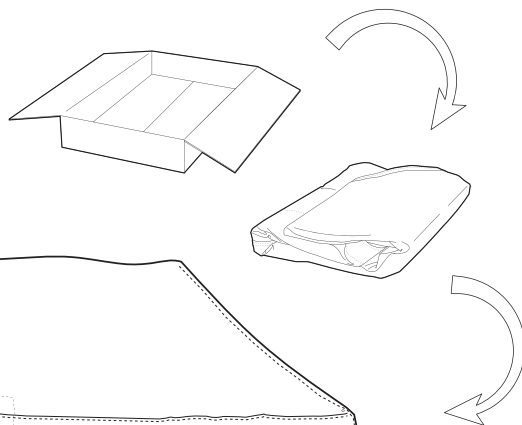

 Carefully pull the canopy over the top of the frame and ensure all corners are placed into position.

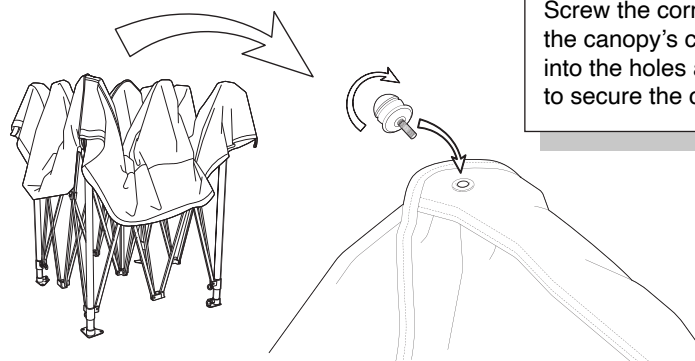

Screw the corner baubles through the canopy's corner eyelet and into the holes at the top of the legs to secure the canopy in place.

 
3

PACKING AWAY

When packing the frame away, you can leave the canopy attached to the frame.




Care should be taken to ensure the fabric canopy does not get caught in the metal cross bar framework as this can cause the fabric to tear.

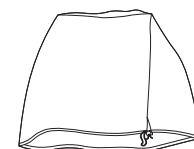


All our instant shelters come with a canopy protector cover. This drawstring bag fits over the canopy when the frame is collapsed, providing protection from marks during storage. This bag can also be used to store the canopy separately.


The following diagram illustrates the most effective way to fold your canopy for packing. Following these steps will ensure that it fits neatly and securely for storage.

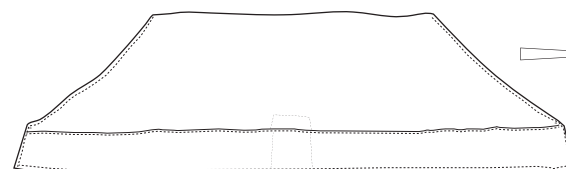 

Fold lengthways again into thirds

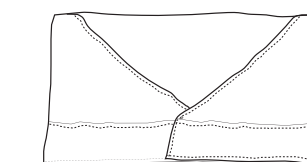 

Fold over each corner into the centre

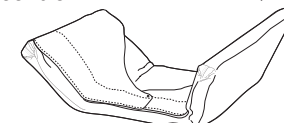 


Fold into thirds

12

AWNING EXTENSION



Bespoke Optional Extra

 Erect the gazebo as per the instructions. You will notice on the front valance of the canopy that there is a velcro flap.

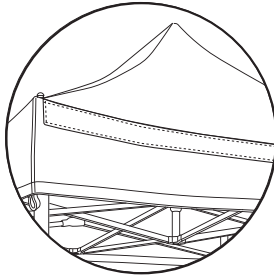


Before raising the full height of the shelter, remove the awning material from its packaging and attach to the front valance part of the canopy by use of the velcro strips.

  
Connect the support bars together and slide these through the pocket at the bottom edge of the awning material. Slide one complete bar from one end and the other from the opposite end. Overlap the bars in the middle so the fixing holes line up.

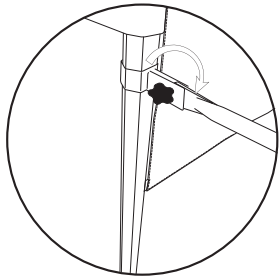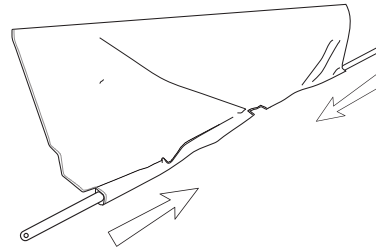

 
Attach the clamps to the adjustable end struts. Fix the clamps to the gazebo frame legs and tighten. Ensure each bar is pointing directly out and away from the shelter. If the bar appears to be at an angle, swap the end leg clamps over.

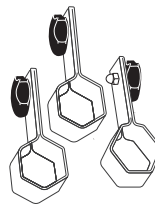

 Remove the black cap from the end strut and place through the hole of the main support bar. Loosen the grey plastic clamp by pulling the lever downwards, then pull the extender bar outwards until the material is right. Close the grey clamp back up to tighten and repeat on opposite end and middle bar.

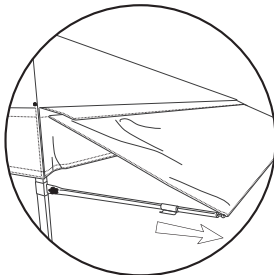


11

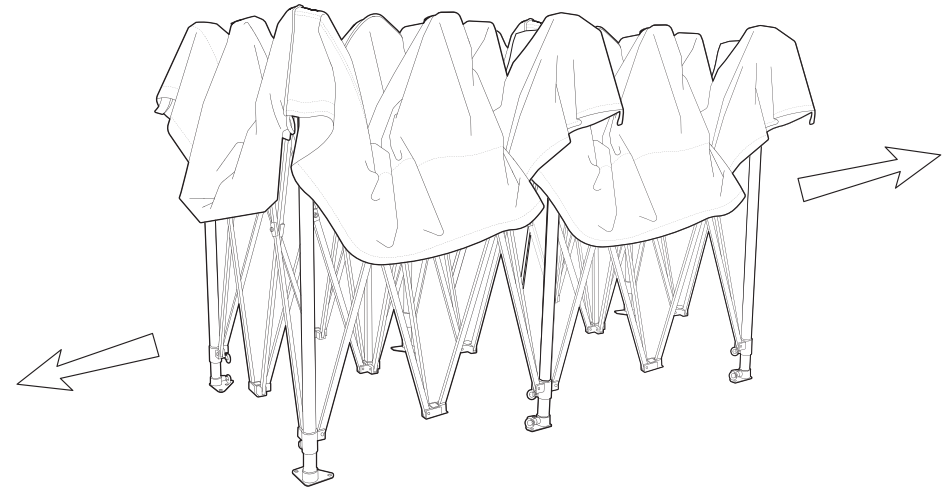 


Holding the central cross bars at either end, walk the frame outwards as far as it will go.

 Person 1 and 2: Move to underneath the shelter and each push up on the bottom of the two outer apex post joints to ensure this is secured.

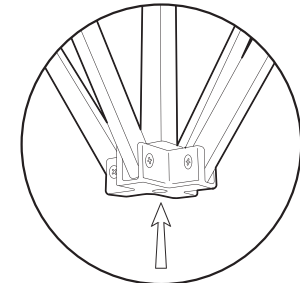


 On the first corner leg, push the sliding joint upward until it clicks into position. This will extend the framework further and allow the pin to fit into the hole at the top of the leg.

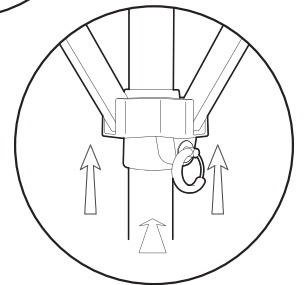


After this clicks into place, Persons 1 and 2 can repeat this process for the remaining three corner legs, ensuring the sliding joints are secured.

 4

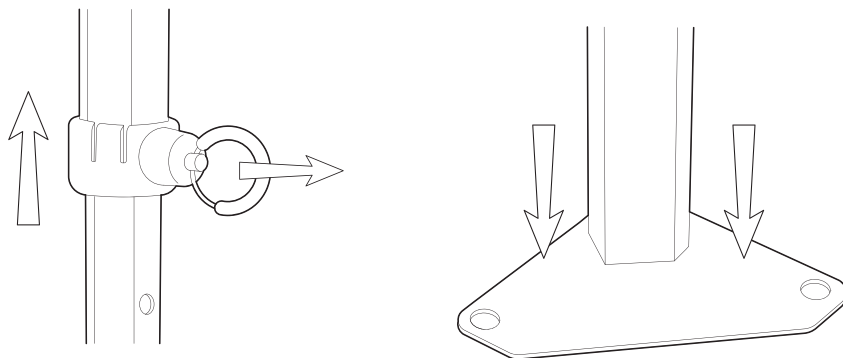


When lifting the outer leg, release the pull pin and guide the inner leg with foot plate down to the floor until the pin locks into the first hole.

 Once you have successfully extended and locked all corner legs, move on to the middle legs.

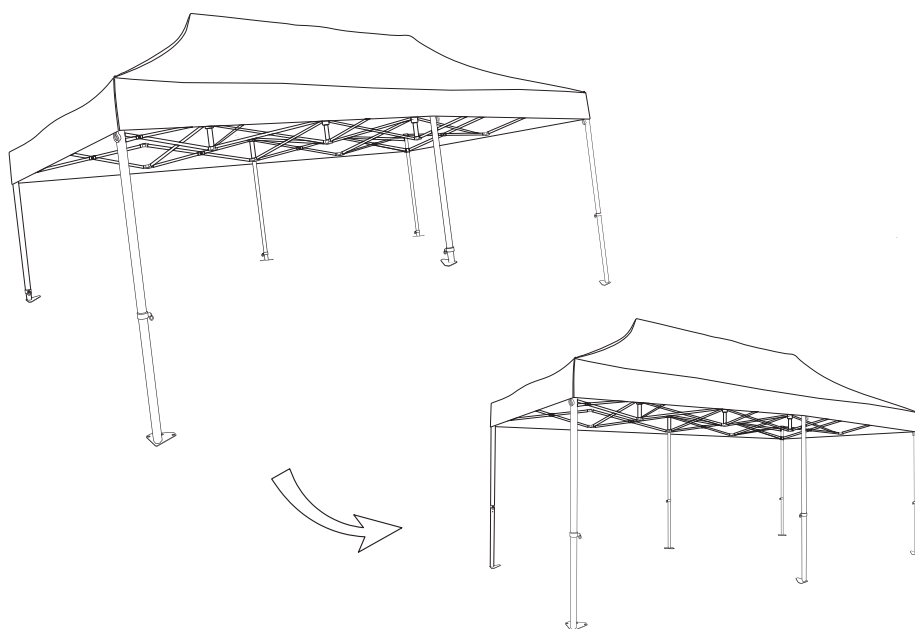

5

 
Secure the strap around the top of the sliding joint as illustrated below and clip it into place at the top corner. Guide the loose strap down the inside of the leg and thread the metal stake through the loop. Drive the metal stake firmly into the ground and tighten the strap using the ratchet mechanism.

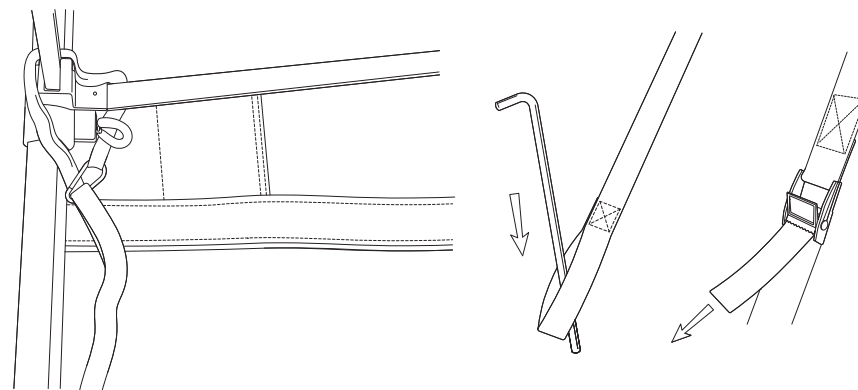


To open the door and window curtain, fold it in half three times, then scrunch and roll it up to the top. Fasten the buckle and tighten the strap to secure it in place.

DOOR

 
WINDOW

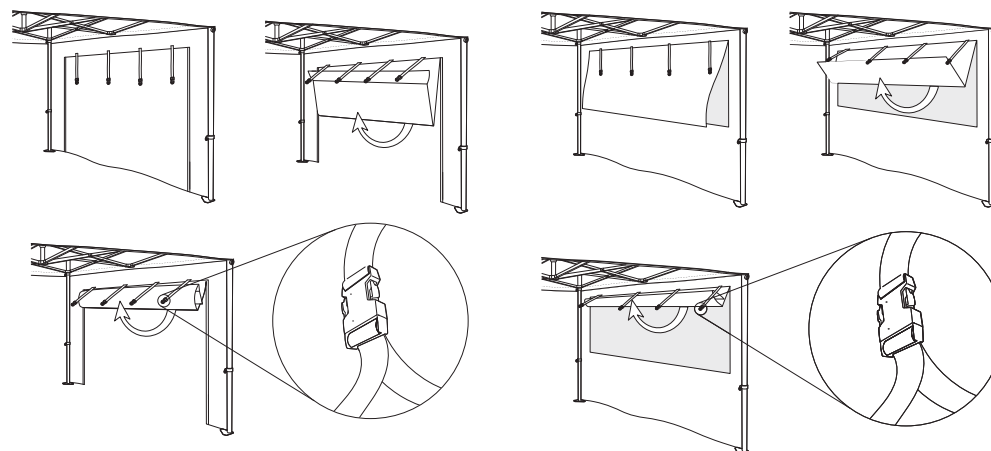

10

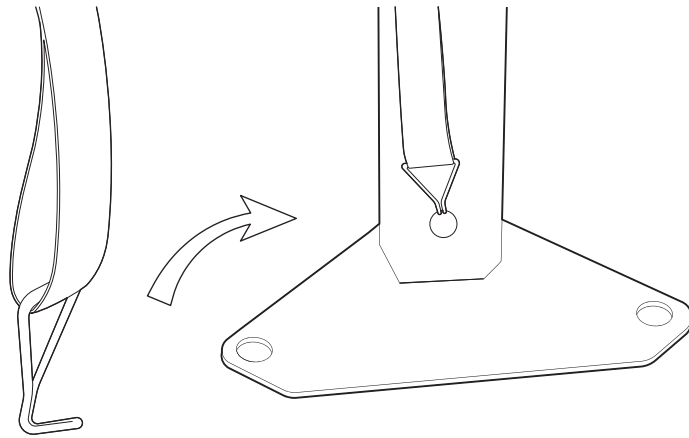 

 To securely fasten the wall to the frame, insert the small metal hook attached at the bottom of the wall into the designated hole at the foot of the frame. Gently pull it tight to ensure a firm and secure hold.

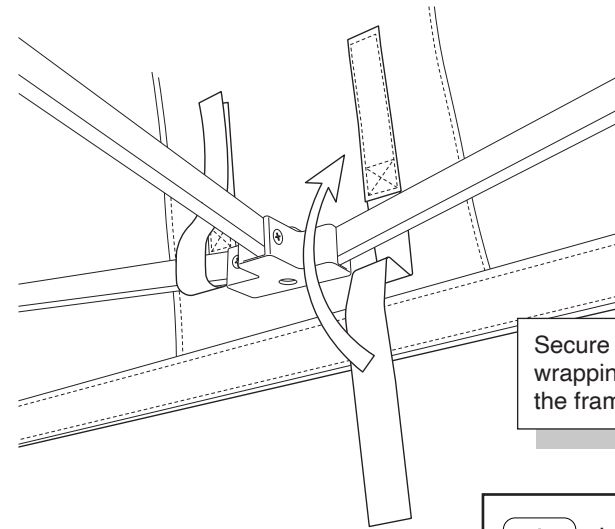


Secure the valance to the frame by wrapping the Velcro straps around the frame on all sides.




Insure these straps are removed before packing the frame away.

 ANCHOR KIT

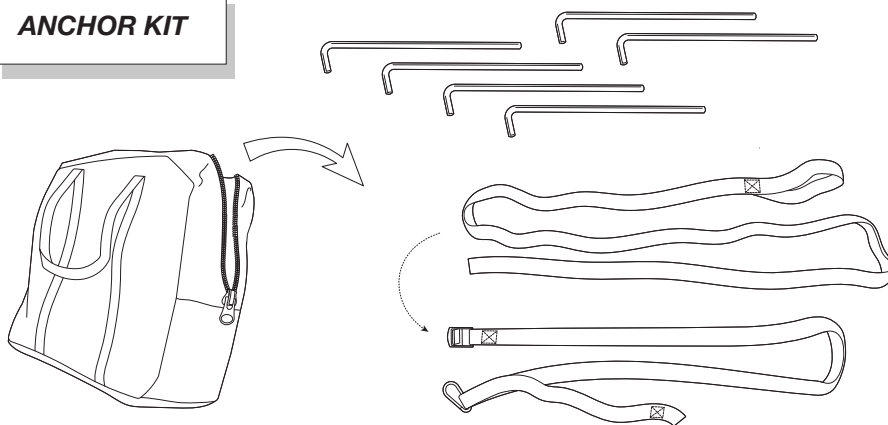


 
Inside the bag, you'll find 360mm steel stakes and webbing anchor straps, designed to securely fasten around the frame.

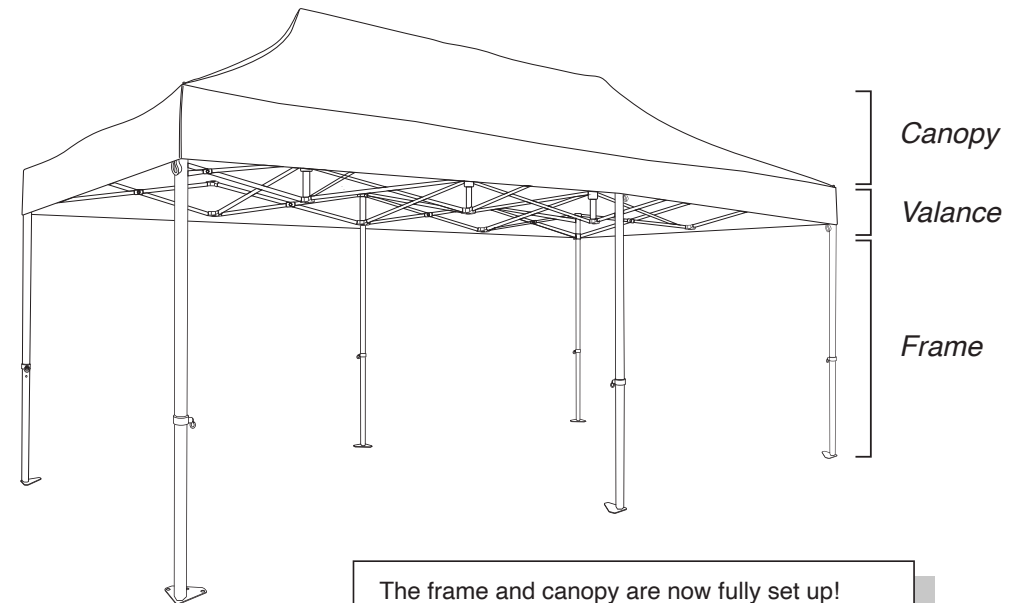

The frame and canopy are now fully set up!


Continue with the next steps to attach walls and accessories.

  Remove the shelter walls from the box and separate them out.

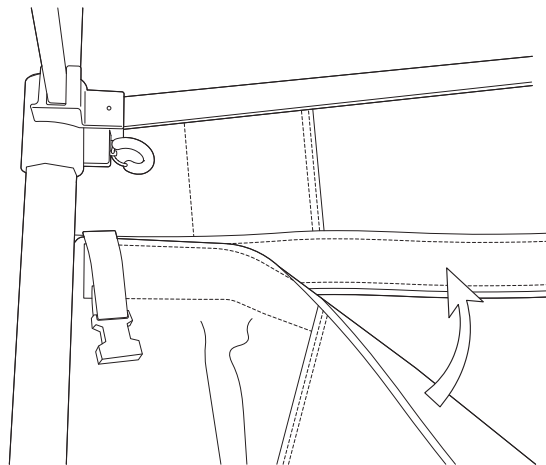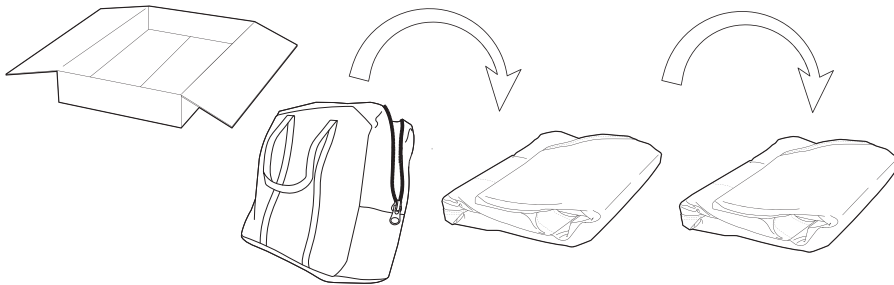


Locate the top edge of the wall with the long Velcro strip and align it with the matching Velcro along the inside bottom edge of the canopy's valance.

 
Secure the walls to the frame by wrapping the Velcro straps around the legs on all sides.

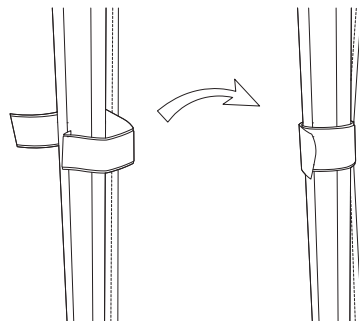

7

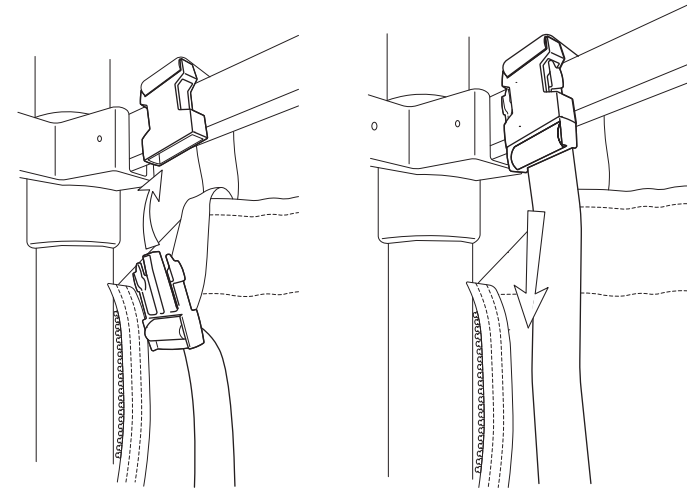 

 Finish attaching the wall by securing the buckle around the frame cross bar and pulling it tight to firmly fasten the wall to the shelter.

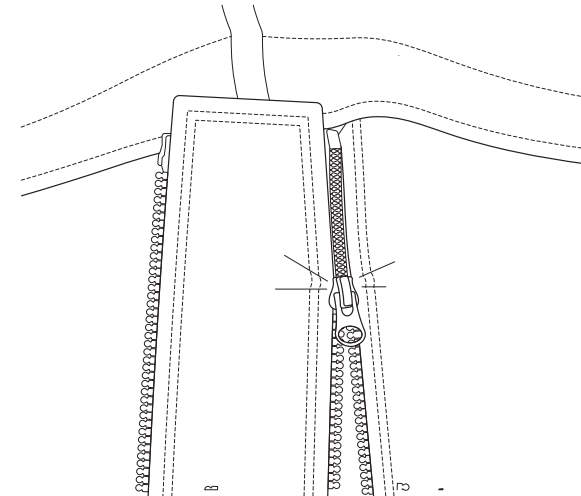

The sidewalls are designed for a close fit to ensure a neat and professional appearance. If you have difficulty connecting the last two walls, use the additional joining strip included with a full set of walls.

8